

TABLE OF CONTENTS

<u>Title</u>	<u>Section</u>
Revision Record	RR
Introduction	INTRO

Part I: Selection of Seismic Restraints for Pipe and Duct

<u>Title</u>	<u>Section</u>
Seismic Restraint Basics for Pipe and Duct	S1.0
Introduction	S1.1
Basic Terms and Definitions	S1.2
Basic Rules for Applying Seismic Restraints to Pipe and Duct	S1.3
Basic Required Project Information	S2.0
Introduction	S2.1
Building Use – Nature of Occupancy	S2.2
Site Class – Soil Type	S2.3
Mapped Acceleration Parameters	S2.4
Seismic Design Category	S2.5
Summary	S2.6
Pipe and Duct Component Importance Factor	S3.0
Introduction	S3.1
Criteria for Assigning a Component Importance Factor	S3.2
Summary	S3.3
Code Based Exemptions for Pipe and Duct	S4.0
Introduction	S4.1
General Exemptions for Pipe and Duct	S4.2
Pipe Specific Exemptions (Single Clevis Hung Pipe)	S4.3
Pipe Specific Exemptions (Trapeze Supported Pipe)	S4.4

TABLE OF CONTENTS

PAGE 1 of 10



Dublin, Ohio, USA • Mississauga, Ontario, Canada

Toll Free (USA Only): 800-959-1229
International: 614-889-0480
FAX: 614-889-0540
World Wide Web: www.kineticsnoise.com
E-mail: sales@kineticsnoise.com

SECTION – T.O.C.

RELEASED ON: 12/09/2010



Member

KINETICS™ Pipe & Duct Seismic Application Manual

<u>Title</u>	<u>Section</u>
Duct Specific Exemptions	S4.5
Summary	S4.6
Code Based Seismic Design Seismic Forces	S5.0
Introduction	S5.1
Code Based Horizontal Seismic Design Force	S5.2
Code Based Vertical Seismic Design Force	S5.3
LRFD versus ASD	S5.4
Summary	S5.5
Anchorage of Seismic Restraints	S6.0
Introduction	S6.1
Load Path	S6.2
Post Installed Concrete Anchors	S6.3
Additional Anchorage Limitations	S6.4
Summary	S6.5
Selection & Location of Seismic Restraints	S7.0
Introduction	S7.1
Information Required for the Selection of Seismic Restraints	S7.2
Horizontal Force Class	S7.3
Seismic Restraint Kit and Attachment Kit Cross-Reference	S7.4
Kinetics Noise Control Seismic Restraint Analysis Output	S7.5
Maximum Allowable Seismic Restraint Spacing	S7.6
Kinetics Noise Control Seismic Restraint Drawing Symbols	S7.7
Seismic Restraint and Hanger Locations	S7.8
Longitudinal Seismic Restraints for Trapeze Supported Pipe & Duct	S7.9
Summary	S7.10
Hanger Rod Reaction Forces & Stiffener Requirements	S8.0
Introduction	S8.1
Horizontal Force Class	S8.2

TABLE OF CONTENTS

PAGE 2 of 10



Dublin, Ohio, USA • Mississauga, Ontario, Canada

Toll Free (USA Only): 800-959-1229
International: 614-889-0480
FAX: 614-889-0540
World Wide Web: www.kineticsnoise.com
E-mail: sales@kineticsnoise.com

SECTION – T.O.C.

RELEASED ON: 12/09/2010



Member

KINETICS™ Pipe & Duct Seismic Application Manual

<u>Title</u>	<u>Section</u>
Hanger Rod Size Code and Allowable Load Data	S8.3
Hanger Rod Seismic Reaction Loads with Struts	S8.4
Hanger Rod Seismic Reaction Loads with Cable Restraints	S8.5
Requirements for Hanger Rod Stiffeners	S8.6
Kinetics On-Line Rod Stiffener Application Tool	S8.7
Summary	S8.8
Extreme Temperature Piping Applications	S9.0
Introduction	S9.1
Extreme Temperature piping Run	S9.2
Seismic Restraint Locations for Extreme Temperature Piping	S9.3
Seismic Restraints and Expansion Loops	S9.4
Non-Anchored Domestic Hot and Chilled Water Piping	S9.5
Trapeze Supported Extreme Temperature Piping	S9.6
Additional Transverse Restraints for Extreme Temperature Piping	S9.7
Final Comment on Transverse Seismic Restraints	S9.8
Seismic Restraint for Drain, Waste, and Vent Lines	S10.0
Introduction	S10.1
Restraint Locations for Drain, Waste, and Vent Lines	S10.2
Sizing Seismic Restraints for Drain, Waste, and Vent Lines	S10.3
Underground Buried Drain, Waste, and Vent Lines	S10.4
No-Hub Pipe Couplings for Seismic Applications	S10.5
Reducing the Number of Restraints for Drain, Waste, & Vent Lines	S10.6
Seismic Restraint Spacing for Pipe and Duct	S11.0
Introduction	S11.1
Seismic Hazard Level SHL	S11.2
SMACNA Seismic Restraint Spacing Recommendations	S11.3
Rectangular and Round Duct	S11.3.1
Single Clevis Supported Pipe and Conduit	S11.3.2

TABLE OF CONTENTS

PAGE 3 of 10



Dublin, Ohio, USA • Mississauga, Ontario, Canada

Toll Free (USA Only): 800-959-1229
International: 614-889-0480
FAX: 614-889-0540
World Wide Web: www.kineticsnoise.com
E-mail: sales@kineticsnoise.com

SECTION – T.O.C.

RELEASED ON: 12/09/2010



Member

KINETICS™ Pipe & Duct Seismic Application Manual

<u>Title</u>	<u>Section</u>
Trapeze and Floor Rack Supported Pipe	S11.3.3
Maximum Seismic Restraint Spacing Based on the Gross Buckling	S11.4
Discussion and Summary	S11.5
The 12" Rule Explained	S12.0
Introduction	S12.1
Measuring the Distance for the 12" Rule	S12.2
Non-Moment Generating (Free Swinging) Connector	S12.3
Types of Non-Moment Generating (Free Swinging) Connectors	S12.4
The Whole Run and Nothing but the Run	S12.5
Summary	S12.6
Fire Protection Piping Systems	S13.0
Introduction	S13.1
ASCE/SEI 7-05 Sections 13.6.8.2 & 13.6.8.3 Fire Protection Piping	S13.2
Section 13.6.8.2 Seismic Design Category C	S13.2.1
Section 13.6.8.3 Seismic Design Categories D through F	S13.2.2
Design Horizontal Seismic Force	S13.3
Cable Type "Tension Only" Seismic Restraints	S13.4
Zone of Influence Defined	S13.5
Longitudinal Seismic Restraints	S13.6
Transverse Seismic Restraints	S13.7
Special Requirements for Branch Lines	S13.8
Fasteners and Attachments	S13.9
Summary	S13.10
Consequential Damage – Swinging Things	S14.0
Introduction	S14.1
Conditions of Application	S14.2
Estimating the Allowable Spacing between Objects	S14.3
Summary	S14.4

TABLE OF CONTENTS

PAGE 4 of 10



Dublin, Ohio, USA • Mississauga, Ontario, Canada

Toll Free (USA Only): 800-959-1229
International: 614-889-0480
FAX: 614-889-0540
World Wide Web: www.kineticsnoise.com
E-mail: sales@kineticsnoise.com

SECTION – T.O.C.

RELEASED ON: 12/09/2010



Member

KINETICS™ Pipe & Duct Seismic Application Manual

<u>Title</u>	<u>Section</u>
Electrical Distribution Systems	S15.0
Introduction	S15.1
“Implied” Blanket Exemption Based on Component Importance	S15.2
Single Supported Conduit Size Exemption	S15.3
Trapeze Supported Electrical Distribution Systems	S15.4
Seismic Application Factors for Electrical Distribution Systems	S15.5
Summary	S15.6

Part II: Installation of Seismic Restraints for Pipe and Duct

<u>Title</u>	<u>Section</u>
Quick Start – Read Me First	I1.0
Seismic Restraint Categories and Types	I1.1
Drawing Symbols	I1.2
Seismic Restraint Spacings	I1.3
Examples of How KNC Drawing Symbols are Used	I1.4
Typical Restraint Arrangements for Single Clevis Hung Pipe	I1.5
Typical Restraint Arrangements for Trapeze Supported Pipe & Duct	I1.6
Isolated Pipe & Duct	I1.7
Important Things to Note and Remember	I1.8
Proper Prior Planning Prevents Poor Performance	I2.0
The Need for a Plan	I2.1
What the MEP Coordinator Needs to Consider	I2.2
What the Contractor Needs to Consider	I2.3
Final Word on the Use of Strut Type Restraints	I2.4
Summary	I2.5
Cable Restraint Schematics for Piping	I3.0
Introduction	I3.1

TABLE OF CONTENTS

PAGE 5 of 10



Dublin, Ohio, USA • Mississauga, Ontario, Canada

Toll Free (USA Only): 800-959-1229
International: 614-889-0480
FAX: 614-889-0540
World Wide Web: www.kineticsnoise.com
E-mail: sales@kineticsnoise.com

SECTION – T.O.C.

RELEASED ON: 12/09/2010



Member

KINETICS™ Pipe & Duct Seismic Application Manual

<u>Title</u>	<u>Section</u>
Transverse (T) Restraint Schematics for Clevis Supported Pipe	13.2
Longitudinal (L) Restraint Schematics for Clevis Supported Pipe	13.3
Combined (TL) Restraint Schematics for Clevis Supported Pipe	13.4
Some Common Types of Clevis Hangers	13.5
Transverse (T) Restraint Schematics for Trapeze Supported Pipe	13.6
Longitudinal (L) Restraint Schematics for Trapeze Supported Pipe	13.7
Transverse (T) Restraint Schematics for Floor/ Roof Mounted Pipe	13.8
Longitudinal (L) Restraint Schematics for Floor/ Roof Mounted Pipe	13.9
Combined (TL) Restraint Schematics for Trapeze Supported Pipe	13.10
Some Common Trapeze Bar Configurations	13.11
Trapeze Bar Design Loads	13.12
“Clamping” the Pipe to the Trapeze Bar – When and How	13.13
Summary for Seismic Cable Restraints for Piping	13.14
Cable Restraint Schematics for Duct	14.0
Introduction	14.1
Transverse (T) Cable Restraint Schematics for Rectangular Duct	14.2
Longitudinal (L) Cable Restraint Schematics for Rectangular Duct	14.3
Transverse (T) Cable Restraint Schematics for Round Duct	14.4
Longitudinal (L) Cable Restraint Schematics for Round Duct	14.5
Transverse (T) Cable Restraints for Floor or Roof Mounted Duct	14.6
Longitudinal (L) Cable Restraints for Floor or Roof Mounted Duct	14.7
Transverse (T), Longitudinal (L), & Combined (TL) Plan Views	14.8
Attachment of Seismic Restraints to Ducts and Trapeze Bars	14.9
Summary for Seismic Cable Restraints for Duct	14.10
Structural Attachments for Pipe and Duct Restraints	15.0
Introduction	15.1
KSUA Attachment Brackets	15.2
KSUA Brackets – Basic Sizes & Installation	15.2.1

TABLE OF CONTENTS

PAGE 6 of 10



Dublin, Ohio, USA • Mississauga, Ontario, Canada

Toll Free (USA Only): 800-959-1229
International: 614-889-0480
FAX: 614-889-0540
World Wide Web: www.kineticsnoise.com
E-mail: sales@kineticsnoise.com

SECTION – T.O.C.

RELEASED ON: 12/09/2010



Vibration Isolation and Seismic Control Manufacturers Association

Member

KINETICS™ Pipe & Duct Seismic Application Manual

<u>Title</u>	<u>Section</u>
KSUA Brackets – Attachment to Steel	15.2.2
KSUA Brackets – Attachment to Concrete	15.2.3
KSUA Brackets – Attachment to CMU Walls	15.2.4
KSUA Brackets – Attachment to Wooden Structures	15.2.5
KSCA Attachment Brackets	15.3
KSCA Brackets – Basic Sizes & Installation	15.3.1
KSCA Brackets – Attachment to Steel	15.3.2
KSCA Brackets – Attachment to Concrete	15.3.3
KSCA Brackets – Attachment to CMU Walls	15.3.4
KSCA Brackets – Attachment to Wooden Structures	15.3.5
KSCC Attachment Brackets	15.4
KSCC Brackets – Basic Sizes & Installation	15.4.1
KSCC Brackets – Attachment to Steel	15.4.2
KSCC Brackets – Attachment to Concrete	15.4.3
KSCC Brackets – Attachment to CMU Walls	15.4.4
KSCC Brackets – Attachment to Wooden Structures	15.4.5
Finishing Touches	15.5
Pipe, Duct, Clevis, and Trapeze Bar Attachments	16.0
Introduction	16.1
KSUA Attachment Brackets	16.2
KSUA Brackets – Basic Sizes & Installation	16.2.1
KSUA Brackets – Attachment to a Clevis or Hanger Rod	16.2.2
KSUA Brackets – Attachment to the Pipe	16.2.3
KSUA Brackets – Attachment to Trapeze Bars	16.2.4
KSCA Attachment Brackets	16.3
KSCA Brackets – Basic Sizes & Installation	16.3.1
KSCA Brackets – Attachment to a Clevis or Hanger Rod	16.3.2
KSCA Brackets – Attachment to Trapeze Bars	16.3.3

TABLE OF CONTENTS

PAGE 7 of 10



Dublin, Ohio, USA • Mississauga, Ontario, Canada

Toll Free (USA Only): 800-959-1229
International: 614-889-0480
FAX: 614-889-0540
World Wide Web: www.kineticsnoise.com
E-mail: sales@kineticsnoise.com

SECTION – T.O.C.

RELEASED ON: 12/09/2010



Member

KINETICS™ Pipe & Duct Seismic Application Manual

<u>Title</u>	<u>Section</u>
KSCC Attachment Brackets	16-4
KSCC Brackets – Basic Sizes & Installation	16.4.1
KSCC Brackets – Attachment to a Clevis or Hanger Rod	16.4.2
KSCC Brackets – Attachment to the Pipe	16.4.3
KSCC Brackets – Attachment to Trapeze Bars	16.4.4
Finishing Touches	16.5
Struts & Stuff	17.0
Introduction	17.1
Conditions of Use for Strut Type Restraints	17.2
Using the Restraint Designation Symbol to Select Struts	17.3
Attaching Strut Members to KSCA & KSCC Brackets	17.4
Attaching Strut Channel to KSCA & KSCC Brackets	17.5
KSCA Brackets to Strut Channel	17.5.1
KSCC Brackets to Strut Channel	17.5.2
Attaching KSCA & KSCC Brackets to Rolled Structural Angle	17.6
KSCA Brackets to Rolled Structural Channel	17.6.1
KSCC Brackets to Rolled Structural Channel	17.6.2
Attaching KSCA & KSCC Brackets to Schedule 40 IPS Pipe	17.7
Strut Restraint Schematics for Piping	17.8
Strut Restraint Schematics for Duct	17.9
Strut Restraint Schematics for Floor/Roof Mounted Pipe	17.10
Strut Restraint Schematics for Floor/Roof Mounted Duct	17.11
Summary	17.12
Hanger Rod Stiffeners – Why, When, & How	18.0
Why are Rod Stiffeners Needed?	18.1
When are Rod Stiffeners Needed?	18.2
How are Rod Stiffeners Selected and Installed?	18.3
Electrical Distribution Systems – Contractor Summary	19.0

TABLE OF CONTENTS

PAGE 8 of 10



Dublin, Ohio, USA • Mississauga, Ontario, Canada

Toll Free (USA Only): 800-959-1229
International: 614-889-0480
FAX: 614-889-0540
World Wide Web: www.kineticsnoise.com
E-mail: sales@kineticsnoise.com

SECTION – T.O.C.

RELEASED ON: 12/09/2010



Member

Appendices

<u>Title</u>	<u>Section</u>
Restraint Data	A1.0
Models KSCU and KSCC Restraint Cable Capacities	A1.1
KSCU & KSCC Non-Isolated Restrained Weight Capacity	A1.2
Pipe Data	A2.0
Standard Steel Pipe Data	A2.1
Fire Suppression Pipe Data	A2.2
Cast Iron Soil Pipe Data	A2.3
PVC & CPVC Pipe Data	A2.4
Copper Water Pipe Data	A2.5
Domestic Hot & Chilled Water Piping Corner Distance Data	A2.6
Duct Data	A3.0
Rectangular Duct Data	A3.1
Round Duct Data	A3.2
Flat Oval Duct Data	A3.3
Sheet Metal Screws Required for Duct Restraint	A3.4
Fillet Weld Size & Length for Duct Restraint	A3.5
ASTM A307 & A325 Bolts Required for Duct Restraint	A3.6
Fastener/Anchor Data	A4.0
Bolt Data	A4.1
Wedge Type Concrete Anchor Data	A4.2
Sheet Metal Screw Data	A4.3
Lag Screw Data	A4.4
Hanger Rod Stiffener Data	A5.0
Estimating Hanger Rod Stiffener Requirements	A5.1
Maximum Un-Stiffened Hanger Rod Length for $0^\circ \leq A \leq 45^\circ$	A5.2
Maximum Un-Stiffened Hanger Rod Length for $45^\circ < A \leq 60^\circ$	A5.3

TABLE OF CONTENTS

PAGE 9 of 10



Dublin, Ohio, USA • Mississauga, Ontario, Canada

Toll Free (USA Only): 800-959-1229
 International: 614-889-0480
 FAX: 614-889-0540
 World Wide Web: www.kineticsnoise.com
 E-mail: sales@kineticsnoise.com

SECTION – T.O.C.

RELEASED ON: 12/09/2010



Member

KINETICS™ Pipe & Duct Seismic Application Manual

<u>Title</u>	<u>Section</u>
AISI Angle Stiffener Data for $0^\circ \leq A \leq 45^\circ$	A5.4
AISI Angle Stiffener Data for $45^\circ < A \leq 60^\circ$	A5.5
Maximum Rod Stiffener Clamp Spacing for $0^\circ \leq A \leq 45^\circ$	A5.6
Maximum Rod Stiffener Clamp Spacing for $45^\circ < A \leq 60^\circ$	A5.7
Rod Stiffener Equivalents	A5.8
Maximum Allowable Restraint Spacing for Pipe & Duct	A6.0
Maximum Allowable Restraint Spacing – Standard Steel Pipe	A6.1
Maximum Allowable Restraint Spacing – Fire Protection Pipe	A6.2
Maximum Allowable Restraint Spacing – Cast Iron Soil Pipe	A6.3
Maximum Allowable Restraint Spacing – PVC & CPVC Pipe	A6.4
Maximum Allowable Restraint Spacing – Copper Water Pipe	A6.5
Maximum Allowable Restraint Spacing – Duct	A6.6
Selected Mapped Acceleration Parameters	A7.0
Selected Mapped Acceleration Parameters – Selected U. S. Cities	A7.1
Selected Mapped Acceleration Parameters – Selected World Cities	A7.2
Electrical Data	A8.0
Electrical Conduit Data	A8.1

TABLE OF CONTENTS

PAGE 10 of 10



Dublin, Ohio, USA • Mississauga, Ontario, Canada

Toll Free (USA Only): 800-959-1229
International: 614-889-0480
FAX: 614-889-0540
World Wide Web: www.kineticsnoise.com
E-mail: sales@kineticsnoise.com

SECTION – T.O.C.

RELEASED ON: 12/09/2010



Member