



FACTORY CURB RT-7 FLOOR

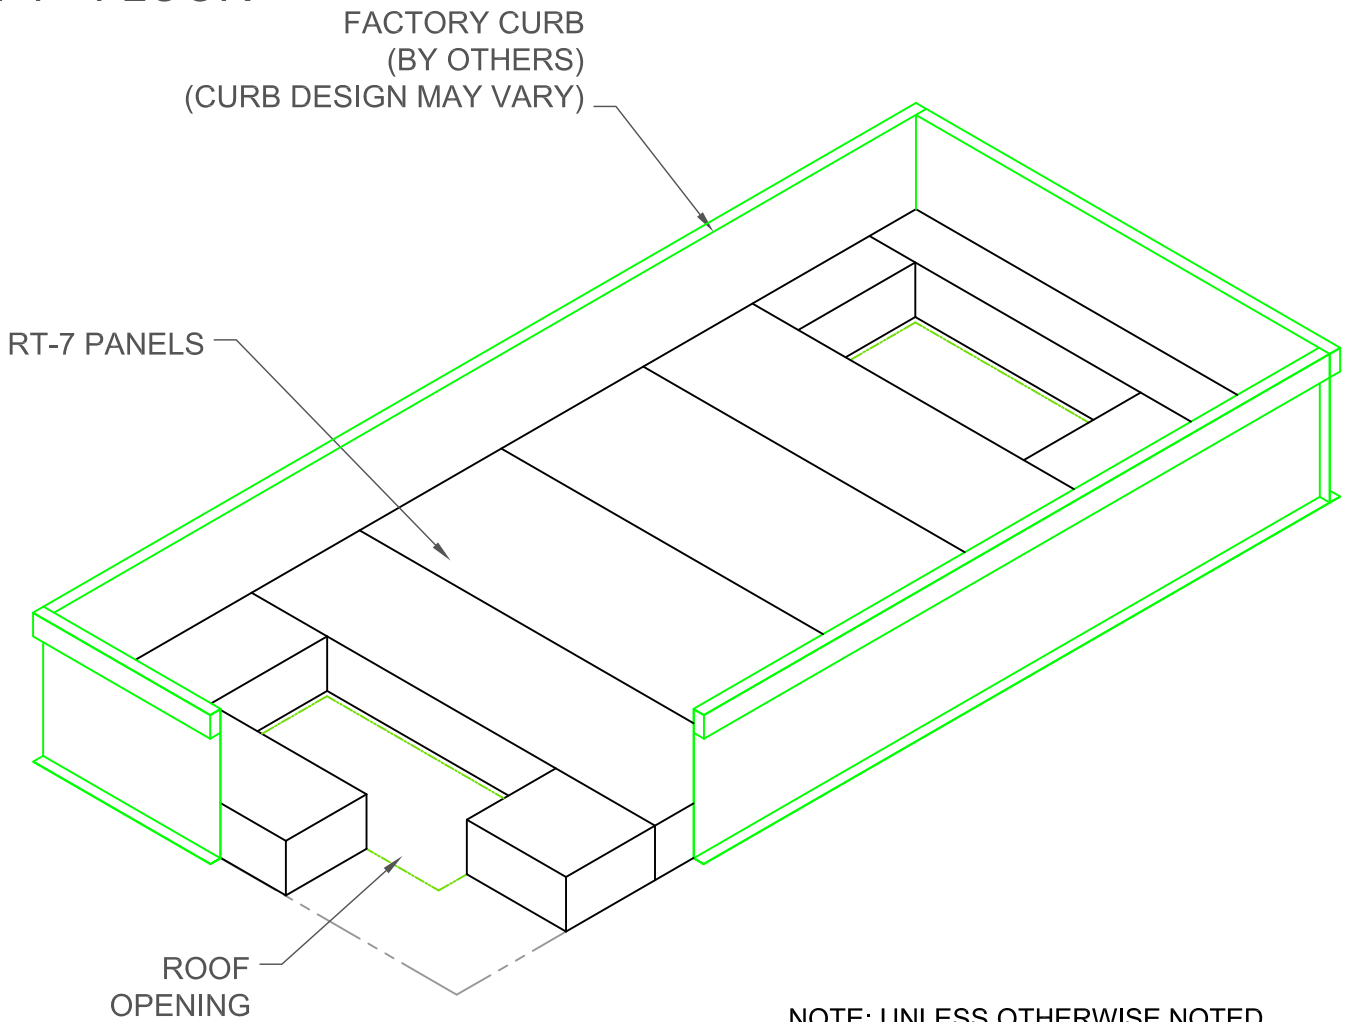

NOTE: UNLESS OTHERWISE NOTED,
FLOOR PANELS ARE TO BE FIELD
INSTALLED, AFTER ESR CURB ASSEMBLY.

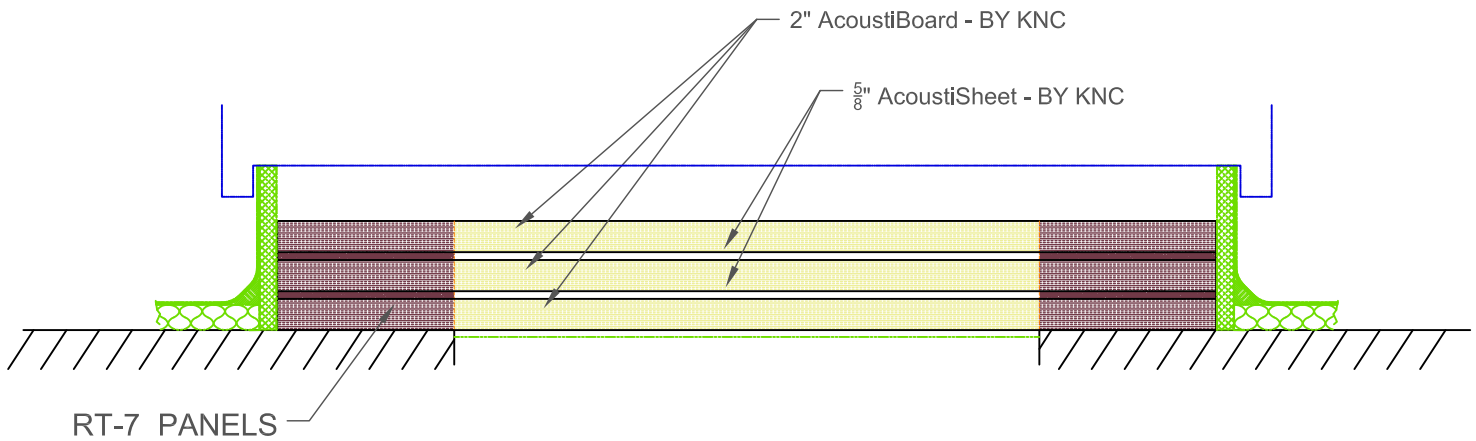

Transmission Loss dB									
Frequency Hz	63	125	250	500	1000	2000	4000	8000	STC
Calculated TL	16*	24	26	32	42	56	62	59*	37

*ASHRAE HANDBOOK 2017, CHAPTER 8, EQUATION 39