




ESSR ISOLATION CURB

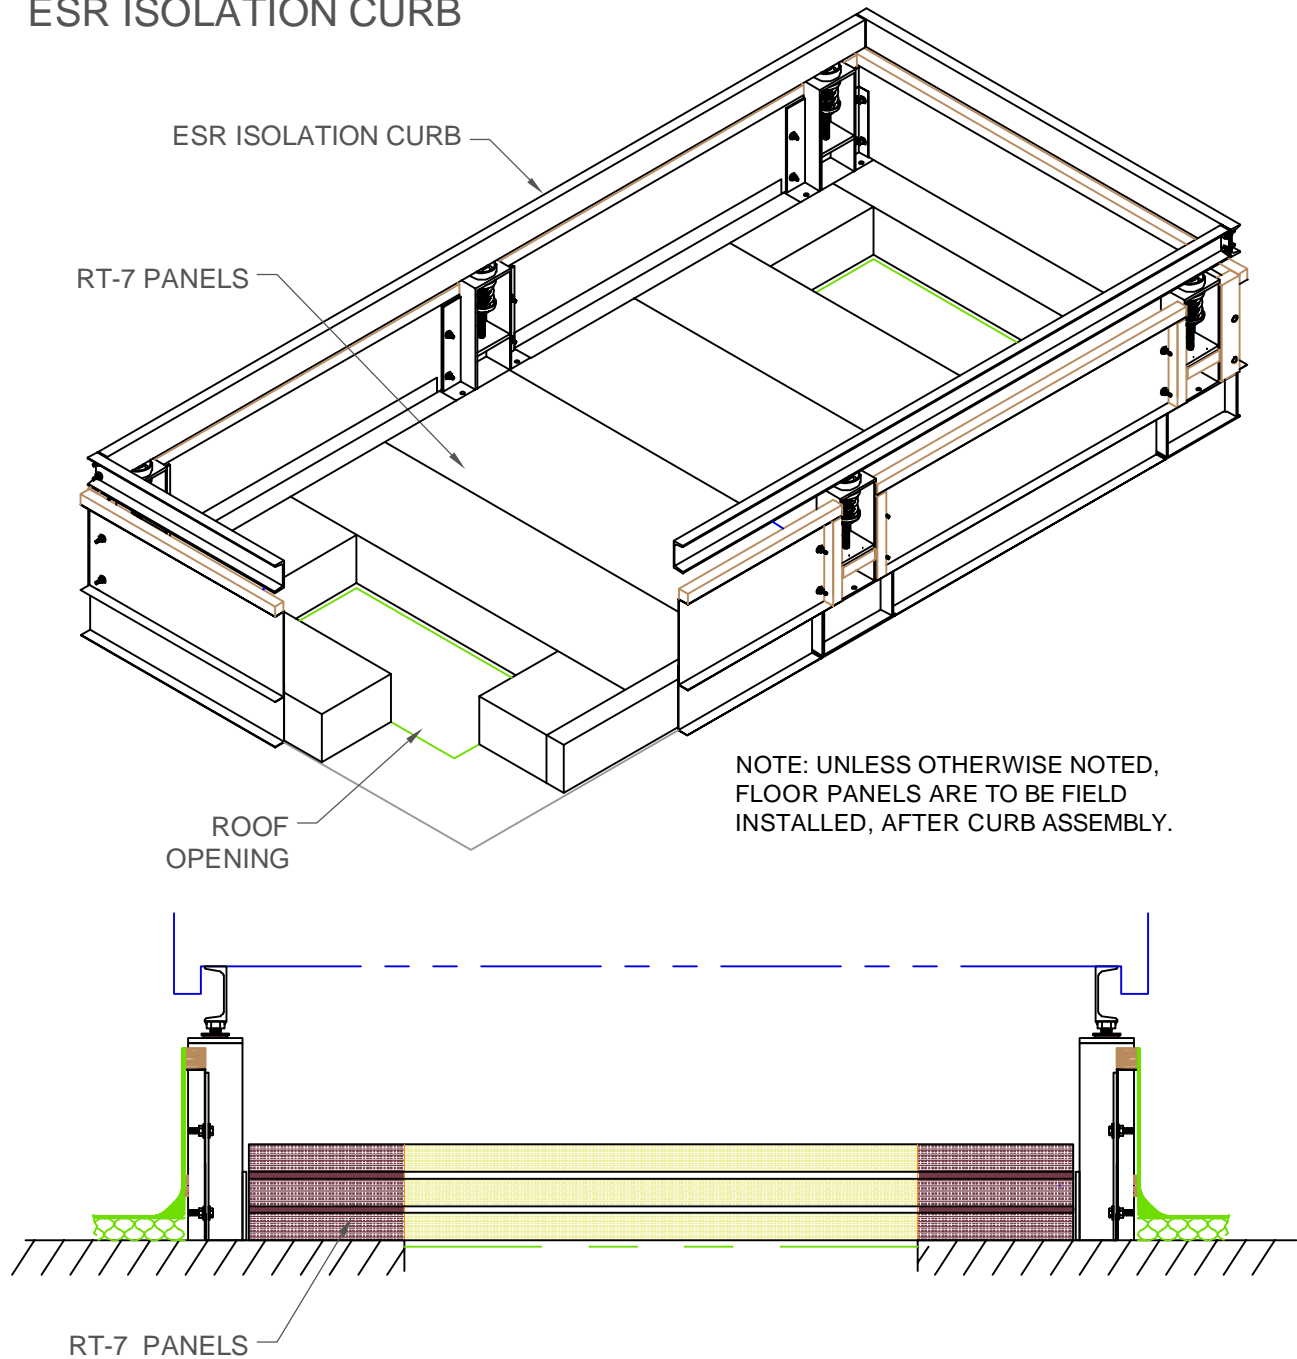

Transmission Loss dB									
Frequency Hz	63	125	250	500	1000	2000	4000	8000	STC
Calculated TL	16*	24	26	32	42	56	62	59*	37
	21*	23	51	58	68	68	77	80*	47
	23*	28	51	58	68	68	77	81*	52
	26*	36	51	59	68	69	80	84*	60

*ASHRAE HANDBOOK 2017, CHAPTER 8, EQUATION 39



FACTORY CURB

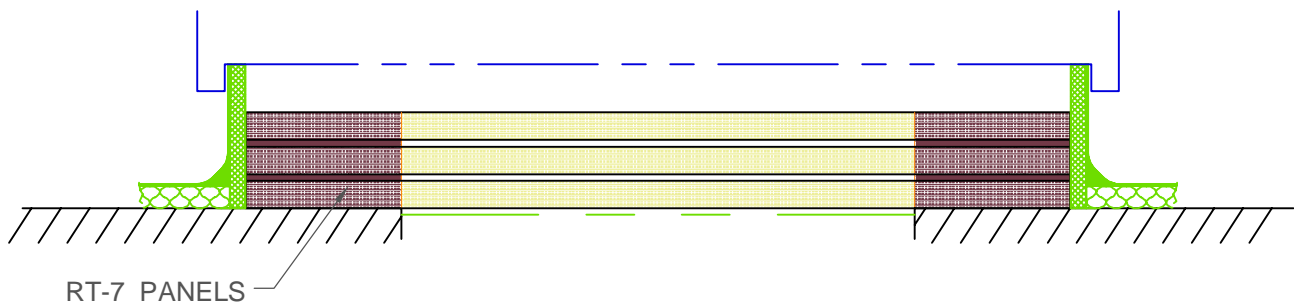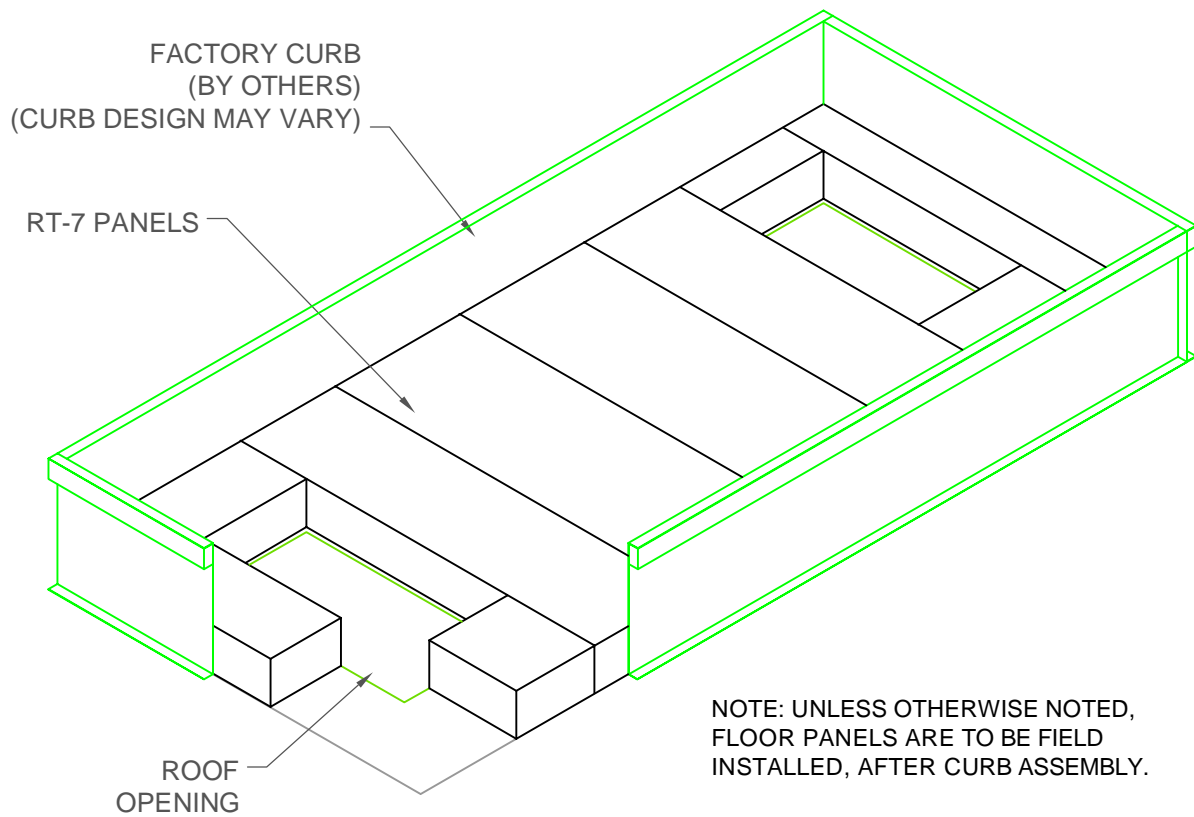

Transmission Loss dB									
Frequency Hz	63	125	250	500	1000	2000	4000	8000	STC
Calculated TL	16*	24	26	32	42	56	62	59*	37
	21*	23	51	58	68	68	77	80*	47
	23*	28	51	58	68	68	77	81*	52
	26*	36	51	59	68	69	80	84*	60

*ASHRAE HANDBOOK 2017, CHAPTER 8, EQUATION 39



KSR ISOLATION RAIL

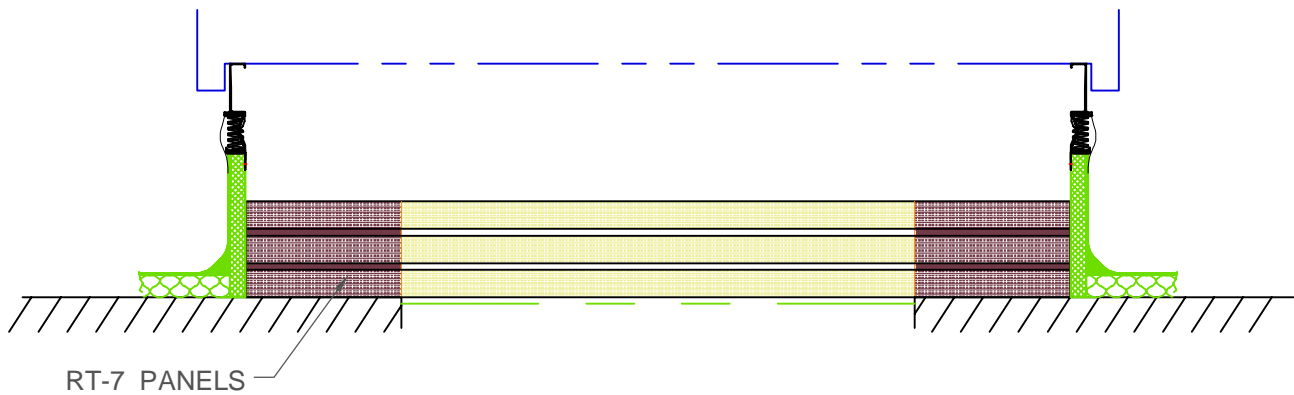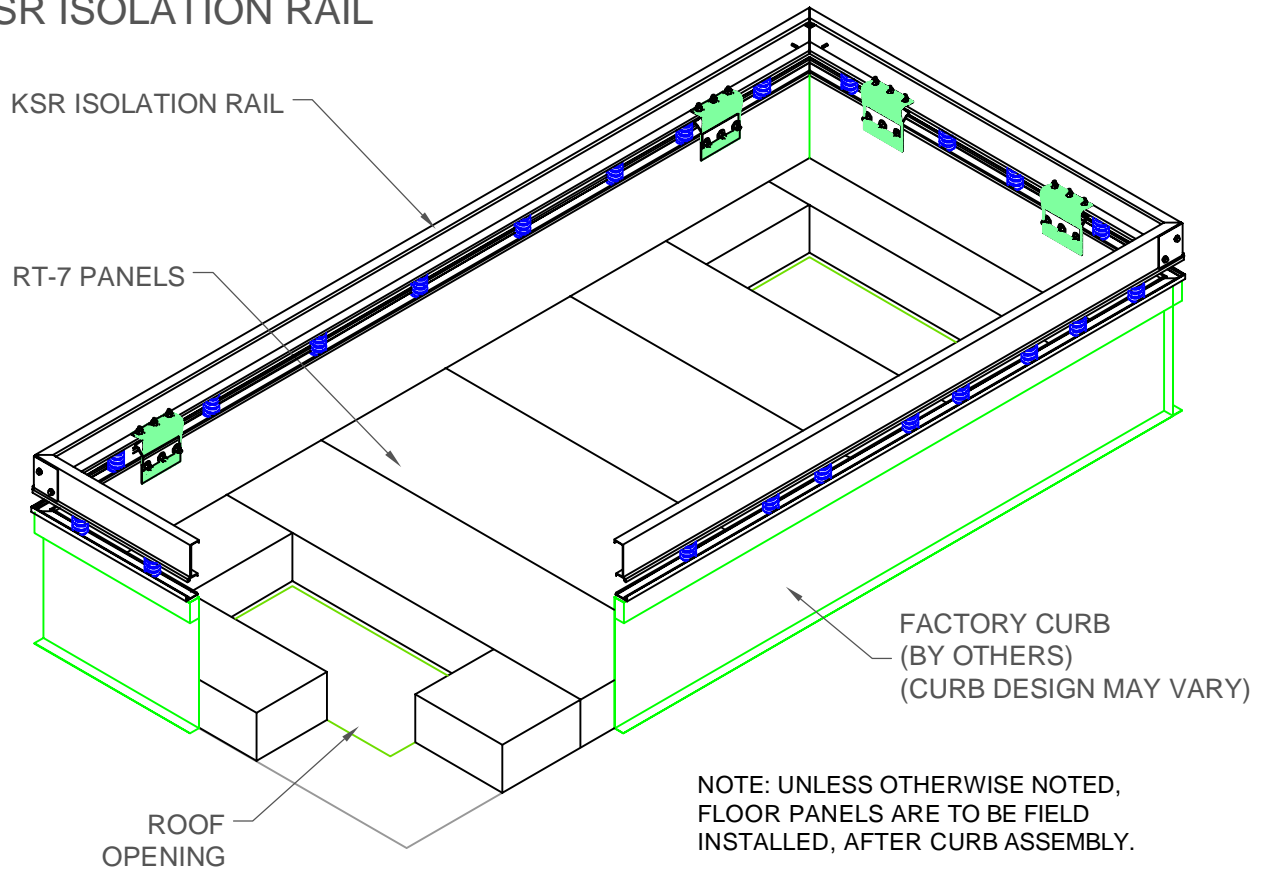

Transmission Loss dB									
Frequency Hz	63	125	250	500	1000	2000	4000	8000	STC
Calculated TL	16*	24	26	32	42	56	62	59*	37
	21*	23	51	58	68	68	77	80*	47
	23*	28	51	58	68	68	77	81*	52
	26*	36	51	59	68	69	80	84*	60

*ASHRAE HANDBOOK 2017, CHAPTER 8, EQUATION 39


KIP-RT ISOLATION STRIPS

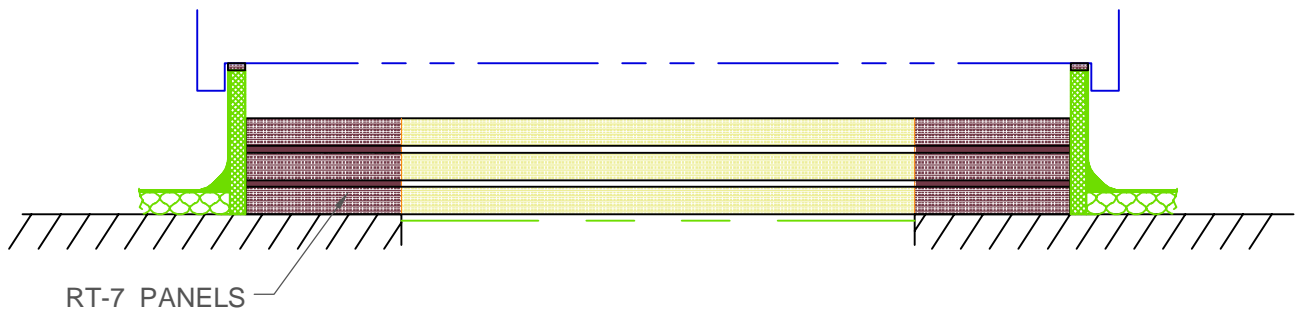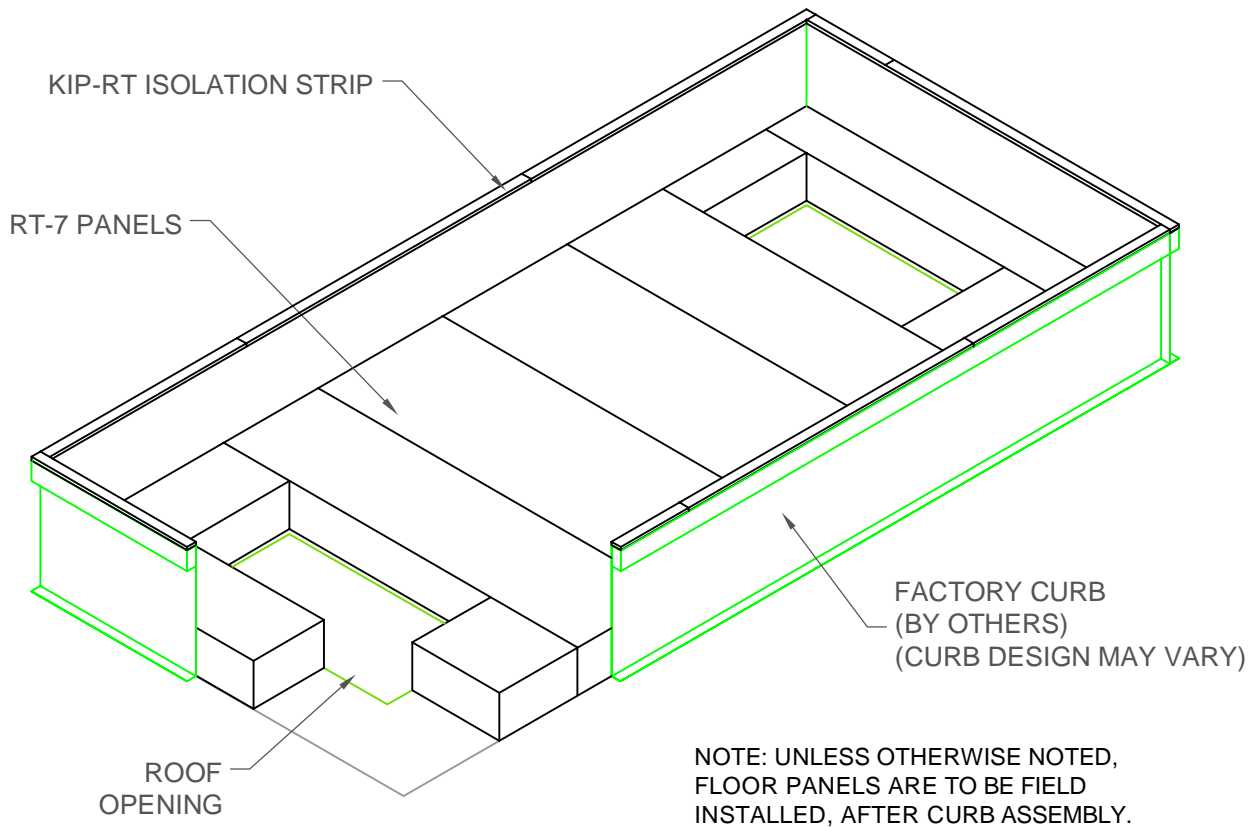


Transmission Loss dB									
Frequency Hz	63	125	250	500	1000	2000	4000	8000	STC
Calculated TL	16*	24	26	32	42	56	62	59*	37
	21*	23	51	58	68	68	77	80*	47
	23*	28	51	58	68	68	77	81*	52
	26*	36	51	59	68	69	80	84*	60

*ASHRAE HANDBOOK 2017, CHAPTER 8, EQUATION 39

KSCR ISOLATION CURB

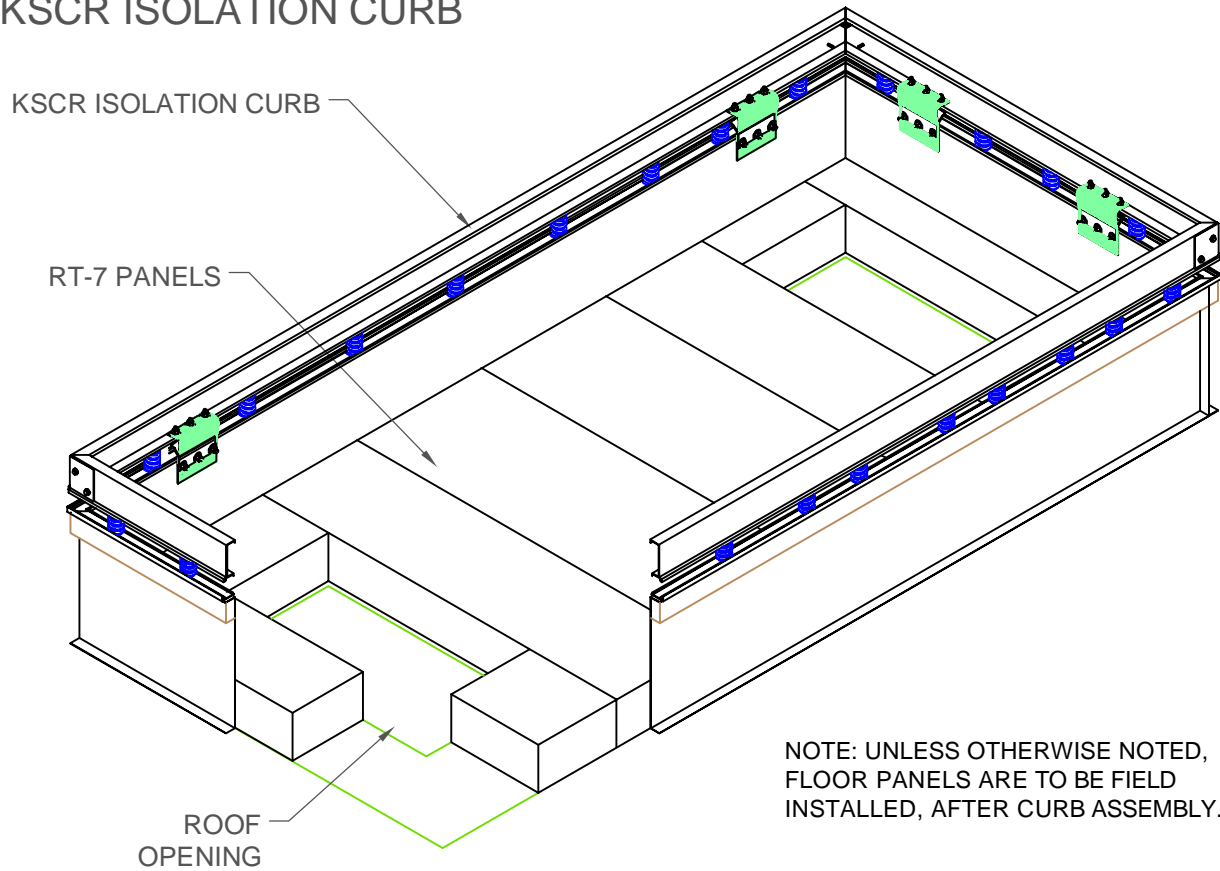

NOTE: UNLESS OTHERWISE NOTED,
FLOOR PANELS ARE TO BE FIELD
INSTALLED, AFTER CURB ASSEMBLY.

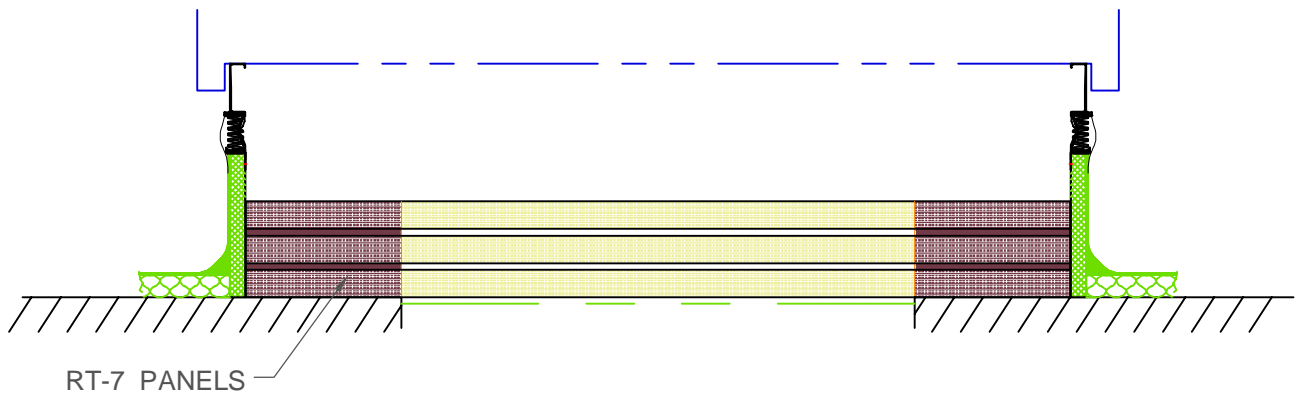

Transmission Loss dB									
Frequency Hz	63	125	250	500	1000	2000	4000	8000	STC
Calculated TL	16*	24	26	32	42	56	62	59*	37
	21*	23	51	58	68	68	77	80*	47
	23*	28	51	58	68	68	77	81*	52
	26*	36	51	59	68	69	80	84*	60

*ASHRAE HANDBOOK 2017, CHAPTER 8, EQUATION 39