


A B
C

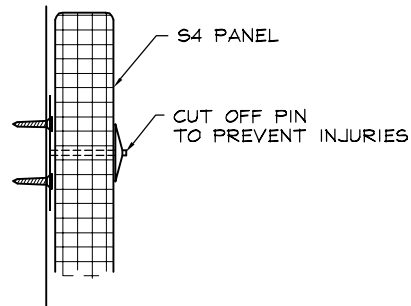

1. DETERMINE EXACT PANEL LOCATIONS
2. FASTEN IMPALING PINS TO SUBSTRATE WITH A MINIMUM OF (2) FASTENERS (BY OTHERS)
3. IMPALE PANEL ONTO PINS
4. CUT OFF EXCESS PIN LENGTH

PANEL LENGTH	# OF CLIPS
UP TO 48"	4
49" TO 72"	6
73" TO 120"	8

NOTE: PSA ADHESIVE BACKING ON IMPALING PIN TO BE USED FOR LOCATING PIN ONLY. THIS IS NOT ACCEPTABLE FOR PERMANENT MOUNTING. FASTENERS MUST BE USED TO SECURE PIN ASSEMBLY TO SUBSTRATE.