


P1 Cable to 1/4" Threaded Hole Installation Overview

1. Press and hold the channel nut tip to insert the aircraft cable.

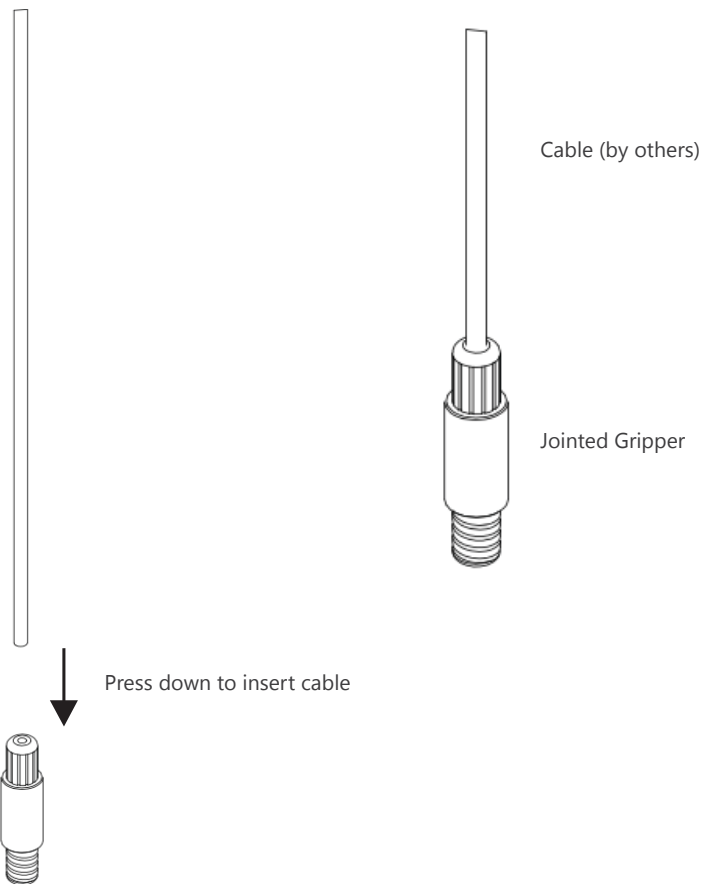

2. Locate the 1/4" threaded hole or coupling nut and screw in the jointed gripper.